



# INSTALLATION GUIDELINE



**DRAINTUBE®** geocomposite



Drainage of sports field foundations



# Synopsis

GI	NER/	AL DESCRIPTION	3
1	L HANDLIND AND STORAGE		3
2 INSTALLATION		TALLATION	3
	2.1	DRAINTUBE® DESCRIPTION	3
	2.2	PUTTING INTO PLACE	4
	2.3	Transverse Connections (at the end of a roll)	5
	2.4	SIDE BY SIDE CONNECTIONS	6
3	TER	MINATION	6
	3.1	CONNECTION TO A COLLECTOR TRENCH	6
	3.2	QUICK CONNECT SYSTEM	7
4	REP	AIR	7
5	ВАС	KFILL PLACEMENT	8
TA	BLE (	OF FIGURES	. 10



### **General Description**

The product consists of geotextile layers comprised of short synthetic fibers of 100% polypropylene or polyester, which are needle punched together. Corrugated polypropylene pipes with two perforations per valley at 180-degree spacing and rotated 90 degrees per valley are inserted longitudinally between the geotextile layers during the manufacturing process at uniform intervals. DRAINTUBE® is manufactured in Canada.


#### 1 HANDLIND AND STORAGE

Rolls of DRAINTUBE® geocomposite shall be shipped to the job site in a manner that will not cause damage to the rolls. The rolls shall be stored flat on a smooth surface (no wooden pallets) away from dirt, mud and excessive heat. For more detailed handling and storage information, please refer to ASTM D4873. The contractor shall handle the rolls so that they are not damaged in any way.

#### 2 Installation

#### 2.1 DRAINTUBE® description

DRAINTUBE® geocomposite is supplied on rolls 3.98 m (13 ft.) wide and 75 m (246 ft.) long (figures 1 & 2).

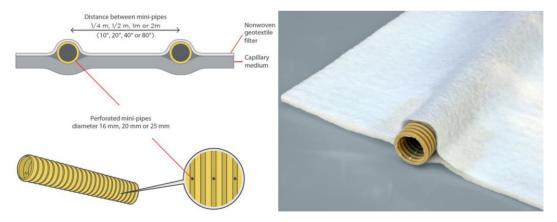

Figures 1: DRAINTUBE® structure





Figure 2: DRAINTUBE® packaging

#### 2.2 Putting into place

DRAINTUBE® is unrolled on a base which has been graded and compacted to the required elevation (figures 3). Ensure that the product is properly oriented.





Figures 3: DRAINTUBE® installation

Protect underlying layers from damage during placement of the geocomposite. Use sandbags or equal to weigh down the geocomposites prior to backfilling to prevent displacement by the wind.




#### 2.3 Transverse Connections (at the end of a roll)


Connection at the leading or terminating edge of the DRAINTUBE® shall be overlapped such that the upper geotextile layer can be rolled back 150 mm (6 in.) minimum and the end of the next roll inserted into the opening. Mini-pipes may be either overlaped by 250 mm (10 in.) minimum (figures 4) or connected using snap coupler fittings supplied by the geocomposite manufacturer (figures 5 & 6). Connection method requirements shall be at the engineers' discretion. Mechanical connections are recommended under high compressive loads.

Overlapped geotextiles shall be secured using sewn seams, welds (hot air or flame) or additional overlap.

The mini-pipes of the geocomposite must always be maintained between the geotextile layers to prevent contamination by soil particles.

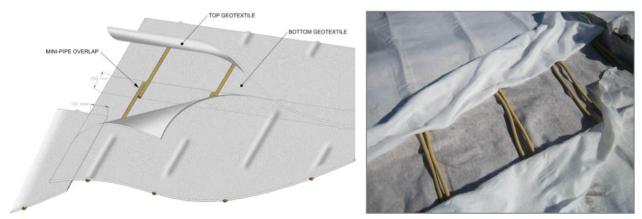

Figures 4: Transverse connections without couplers

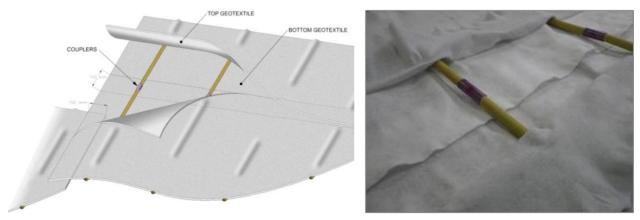

Figures 5: Transverse connections with couplers



#### 2.4 Side by Side Connections

Connections along the side of the DRAINTUBE® roll shall be overlapped 100 mm (4 in.) minimum and shall be secured using sewn seams, additional overlap, or welds (figure 6). Connection method requirements shall be at the direction of the engineer.

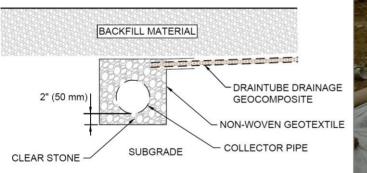


Figure 6: Side by side connections

#### **3** TERMINATION

#### 3.1 Connection to a collector trench

Connection to a collector trench requires an overlap of a minimum of 200 mm (8 in.) and a geotextile cover (figures 7).






Figures 7: Connection to a collector trench



#### 3.2 Quick Connect system

In case of a limited right-of-way or excavation depth, DRAINTUBE® geocomposite can be connected directly to a solid collector drain using the Quick Connect system (figures 8 & 9). This mechanical connection also allows for active management of the outflows.

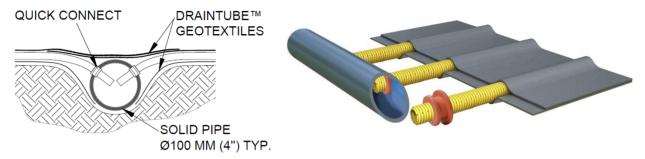

Figures 8: Quick Connect system



Figures 9: Connection to a solid collector drain with Quick Connects

#### 4 REPAIR

Prior to covering the deployed DRAINTUBE® drainage geocomposite, each roll shall be inspected for damage. Any rips, tears or damaged areas on the geocomposite shall be repaired.

If a section of pipe is damaged during installation, add a piece of undamaged pipe of the same diameter next to the damaged pipe, extending a minimum of 150 mm (6 in.) beyond each end of the damaged section of pipe.

If the geotextile is ripped or torn, install an undamaged piece of the same material under the hole that extends a minimum of 150 mm (6 in.) beyond the hole in all directions to ensure that protection of the geomembrane is maintained.



If the area to be repaired is more than 50 percent of the width of the panel, then the damaged area shall be cut out and replaced with undamaged material. Damaged geotextile shall be replaced by the same type of geotextile.

#### 5 BACKFILL PLACEMENT

The geocomposite drainage layer shall be covered with the specified material within 14 days of deployment. The backfill shall be free of foreign matter which could damage the geocomposite drainage layer. Backfill may usually be placed directly on DRAINTUBE® (figures 10). Care should be taken to avoid displacement of the geocomposite.





Figures 10: Backfilling

The backfill shall not be dropped directly onto the drainage geocomposite from a height greater than 1 meter (3 ft.). The backfill shall be pushed over the geocomposite drainage layer in an upward tumbling motion that prevents wrinkles in the drainage layer.

Low ground pressure All-Terrain Vehicle (ATV) that exerts a maximum load of 6 psi may be used on DRAINTUBE®. It shall be operated to avoid abrupt stops, starts, and/or turns. ATV tires shall be clean and no passengers are allowed on the ATV. No other equipment shall be operated on the top surface of the geocomposite drainage layer without permission from the Engineer.

The contractor must maintain a minimum of 300 mm (12 in.) of backfill between DRAINTUBE® and the backfill equipment or use adapted lightweight equipment. Heavy equipment like dumpers shall operate on access roads with a minimum thickness of 1 m (3 ft.) above the DRAINTUBE®.







Figures 11: Synthetic and natural turf sports fields



## **Table of figures**

Figures 1: DRAINTUBE® structure	3
Figure 2: DRAINTUBE® packaging	4
Figures 3: DRAINTUBE® installation	
Figures 4: Transverse connections without couplers	5
Figures 5: Transverse connections with couplers	5
Figure 6: Side by side connections	6
Figures 7: Connection to a collector trench	6
Figures 8: Quick Connect system	7
Figures 9: Connection to a solid collector drain with Quick Connects	
Figures 10: Backfilling	
Figures 11: Synthetic and natural turf sports fields	